

> welcome to the crazy world of parenting.
take a deep breath...

note:

PG ~~parental~~ ^{female} guidance required

NB baby not included



vibe instructions

assembling your new phil&teds inline™ vibe is effortless and tool-free. just follow these simple steps and in 4.25 minutes you'll be off.

bits & bobs

the red numbers below refer to buggy parts indicated inside the back flap of this guide.

1. intelligent handle brake
2. intelligent handle
3. wrist strap
4. double kit (sold separately)
5. fold lock
6. double kit harness
7. rear guards
8. rear axles
9. rear wheels
10. sunhood
11. back flap
12. slide lock harness
13. pull bar
14. red safety lock
15. footwell
16. swivel lock
17. double kit spring lock
18. front wheel

safe & sound

we've attained the following safety standards.

- EN 1888:2005
- AS/NZS 2088:2009
- ASTM F833-08/10
- SOR/85-379

wheeling & dealing

keep tyres inflated to 22PSI max

- a attach rear guards by sliding them down track at base of wheel frame. to remove rear guards, pull bottom edge of guard outwards and slide it up and out of track.
- b insert axles into rear wheels (from side without brake disk).
- c to attach rear wheels: depress silver axle hub and insert wheel axle into buggy axle housing.
- d to unfold frame: open fold lock handles.
- e open and extend buggy, close fold lock handles.
- f to attach front wheel: fully extend swivel lock knob and insert wheel rod into buggy frame, as shown. release swivel lock knob and check wheel is in place for use.
to place front wheel in swivel position: rotate 90° until swivel lock knob clicks into place (visibly extended).
to lock swivel wheel: rotate 90° until swivel lock knob clicks into place and is no longer extended.

pull bar

- g** slot pull bar into upper set of sockets on centre front of buggy frame.
to remove: rotate bayonet release levers '1' upwards, slide pull bar up frame, lift and remove pull bar.
- h** when double kit is attached to front of buggy (baby & toddler position), remove pull bar and store in moulded sockets on rear cross bar, as shown.

sunhood

- i** to attach the sunhood: lay sunhood on frame facing down towards front end of buggy. use palms of hands to snap attach plastic clips onto frame. rotate sunhood backwards. slide snap attachments up/down frame to alter headroom.
to remove: place thumbs on plastic clips and rotate snap attachments outwards, remove sunhood from frame.

intelligent handle adjustment

- j** to alter handle height: depress both black buttons located on inside of handle and rotate handle into desired position.

intelligent handle brake

- k** press small red button for park.
press large black button for go.

harness adjustment

- l** under padded seat, turn harness strap retainer to vertical position and slide to either top, middle, or lower setting. lock in place by turning strap retainer to horizontal position.
note breastplate should fit snugly on baby's chest, allowing you to fit 2 average sized fingers between straps and baby. harness strap tension can be adjusted using clips located at shoulder height.

ups & downs

- m** vibrate seat can be adjusted to any ergonomic position from upright through to lie-flat.
- n** to adjust seat for recline: release seat adjustment clip on seat back, recline seat into desired position, secure seat adjustment clip.
to adjust seat for lie-flat position: recline seat fully and undo zips on either side of front seat pad.

double buggy

- to use baby phil&ted's toddler position requires purchase of philphil&tedsted's double kit accessory.
- o** double kit on back: fit double kit into moulded plastic sockets on rear cross bar and ensure bayonet fitting is secure. tilt double kit back ensuring spring locks are engaged. load heavier toddler in front seat first. then place lighter toddler in double kit

at back. always unload rear toddler first.

warning: never place a child in double kit without a child in front seat.

warning: In the double configuration the recommended load is 20kg/44lbs in front seat and 15kg/33lbs in rear seat. The maximum combined weight is 35kg/77lbs.

warning: In the double configuration with the double kit on front, the maximum recommended load is 15kg/33lbs. The maximum recommended combined load is 24kg/53lbs.

p to remove: double kit from rear rotate bayonet release levers upwards, slide double kit backwards, lift and remove.

q attaching double kit to front: place vibe seat in lie-flat position. remove pull bar from front of vibe and fit double kit into front frame sockets.

note double kit can fit in either set of sockets. to remove from front of buggy: rotate bayonet release levers upwards, slide double kit up frame, lift and remove.

note: double kit has a recline feature.

to activate: undo zips that run around back of seat.

folding

to prepare for folding: rotate handle into upper most position and ensure front wheel is in swivel mode. release child harness. release fold locks.

note vibe can be folded with double kit attached to front or rear.

warning: take care when folding or unfolding the buggy to prevent your fingers being entrapped.

r folding without double kit on: depress red safety lock.

s fold so that buggy nose cone and handle come together, ensure front wheel lies flat against buggy. lock frame and secure by closing fold locks.

note: sunhood, pull bar, and double kit can remain attached.

t folding with double kit on: release double kit spring locks as shown.

note do not take double kit out of moulded sockets.

u tilt double kit towards front of buggy. lift front seat up and slide double kit underneath. close fold/safety locks.

v folded buggy can be manoeuvred using pull bar as handle.

add & adapt

other products available for vibe:

buggy covers

- single and double storm cover
- single and double mesh cover

buggy beds and liners

- buggy cocoon
- snuggle & snooze sleeping bag

buggy storage

- up & away travel bag
- base bag
- diddie bag

cuts & bruises

vibe fabric. brush off dirt. more intense cleaning can be done by hand, in warm water, using a mild natural soap. do not use detergents or bleach. air dry.

vibe frame. brush dirt off frame and wheels regularly. clean with a non-abrasive household cleaner and soft cloth. wash off sand and salt after visiting beach. always dry frame if wet.

vibe tyre and inner tube. the valve is car-size. manually inflate to 22psi max. releasing air gives a softer ride but lower pressure reduces tread life. new inner tubes and tyres are generally available (30cm x 5cm low profile tyre) from your dealer, cycle or specialist wheel shops. standard tyre kits can repair punctures. a flat tyre can result from grit holding the valve open; to check: inflate tyre, deflate rapidly, and re-inflate. tyres and tubes are not under warranty. do not over inflate. tyre pressure is affected by heat especially when inside parked cars.

vibe rubber covers and grip. take care to avoid damage to foam rubber. foam rubber is not under warranty.

vibe moving parts. excessive wear can reduce effectiveness and safety. parts may need periodic lubrication. inspect essential components for: fraying – especially webbing straps and safety harnesses. wear – locks, snap fasteners, tyres, plastic parts, zips and moving parts. safety –locks must not be loose.

rights & remedies

We want to give owners confidence in the quality of our products. They are fully warranted against defects in materials & workmanship for one year from the date of purchase.

What is the warranty? If we determine that the product has a manufacturing fault we will repair it free of charge. If not practical to repair it we will, at our discretion, replace the faulty part in question*.

What if it's outside the warranty terms? If the product fails due to wear & tear, accident, neglect or negligence, or if it is outside the 1 year warranty period, we will happily repair it for a reasonable charge.

Who do I contact? If your product is less than a year old and subject to a warranty claim please file one through the support section of the phil&teds website: www.philandteds.com/support. If you are unsure if the product is subject to a warranty claim, or it is outside the one year warranty period, please consult our web support (www.philandteds.com/support) from where you can access a local customer care team. You will need to provide proof of purchase. They will inform you of the next step.

Who is covered? The original purchaser buying product from an authorised dealer. Proof of purchase is required.

What is covered? Workmanship or materials that are deemed faulty by phil&teds, providing

the product has at all times been used in normal conditions, used in accordance with the instructions & been properly maintained.

What is not covered? Second hand product; modified product; poorly maintained product; normal wear, fading & fabric cuts; improper use or care: (by way of example) abnormal use; not following instructions; excessive load; transport damage i.e. airline or freight damage.

Customer costs within warranty. The customer is responsible for any inwards freight charge to return product to a phil&teds representative for warranty & or service.

Customer costs outside of warranty. Where proof of purchase is not provided or product is outside of the one year warranty period, phil&teds reserves the right to charge a service fee and/or charge for parts replaced/ repaired. A return freight charge may apply.

Exclusions Any consequential loss or damage to any person or property directly or indirectly as a result of using phil&teds product.

General care instructions Rubber tyres can react with some surfaces (including, but not limited to, vinyl floor coverings, carpets, synthetic laminates, parquet and linoleum) and cause stains. Always stand the stroller on a protective surface when indoors.

WORLDWIDE COVERAGE: If you file a warranty claim outside of the country of purchase we reserve the right to charge freight and/or service fees.

Please note that tyres, inner tubes and foam

hand grips are not covered by warranty, except for out of box instances of failure.

log on & relax

please register your product purchase through our online warranty registration by visiting

www.philandteds.com/register

* Consumers may have extra rights in some countries or states.

Warnings

IMPORTANT: Read instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

European Safety Standard (EN 1888:2005) states:

- This vehicle is intended for children from newborn to 6 years and up to a maximum weight of 20kg/44lbs (15kg/33lbs when in double kit).
- It may be dangerous to leave your child unattended.
- Ensure that all locking devices are engaged before use.
- Use a harness as soon as your child can sit unaided.
- The parking device shall be engaged during the loading and unloading of children.

- The buggy shall only be used for a maximum of 2 children.
- Accessories or replacement parts that are not approved by the manufacturer or distributor should not be used.
- Any load attached to the handle affects the stability of the stroller.
- Do not place more than 5kg/11lbs in the parcel tray.
- Always use the crotch strap in combination with the waist belt.
- Check that the stroller body or seat unit attachment devices are correctly engaged before use.
- This product is not suitable for running or skating.
- Maximum pressure of tyres is 22psi. Only inflate with a hand pump, do not inflate with an air compressor or similar intended for car tyres.

American Safety Standard (ASTM: F833-08/10) states:

- Never leave your child unattended in the stroller.
- This vehicle is intended for children from newborn to 6 years and up to a maximum weight of 20kg/44lbs (15kg/33lbs when in double kit).
- To prevent the stroller from

becoming unstable, do not place parcels or accessory items anywhere except in the storage basket and pockets provided. Do not hang items such as shopping bags from the frame.

- Do not place more than 5kg/11lbs in the parcel tray. Excessive weight may cause a hazardous unstable condition to exist.
- Always use the safety harness to avoid serious injury from falling or sliding out. Always secure all safety harness straps and ensure it's correctly fitted and adjusted to secure the child firmly.

Australia / New Zealand Safety Standard (AS/NZS: 2088:2009 +CPN8) states:

To avoid injury or death:
Always apply the breaks whenever the stroller is stationary.

- Follow the manufacturers instruction.
- Do not leave children unattended.
- Secure the child in the harness at all times.
- Do not carry extra children or bags on this stroller.
- Do not place more than 5kg/11lbs in the parcel tray. Excessive weight may cause a hazardous unstable condition to exist.

- Make sure children are clear of any moving parts if you adjust the stroller.
- Use the harness at all times.
- When not in use disconnect shoulder straps from the waist strap or buckle, as they may be a strangulation hazard.
- It is unsafe to use accessories other than those approved by the vehicles manufacturer.
- Care should be taken if the stroller is used on stairs or escalators.
- The stroller should not be used near an open fire or exposed flame.
- Maximum pressure of tyres is 22psi. Only inflate with a hand pump, do not inflate with an air compressor or similar intended for car tyres.
- The stroller may become unstable if a parcel bag, other than one recommended by the manufacturer, is used.
- Do not place more than 5kg/11lbs in the parcel tray. The stroller may become unstable if the recommended load is exceeded.
- Take care when folding or unfolding the stroller to prevent your fingers being entrapped.
- This stroller is suitable for children up to 1m/3.3ft in height.

Canadian Safety Standard (SOR/85-379) states:

- Never leave your child unattended in the stroller.
- Always use the safety harness to avoid serious injury from falling or sliding out.