






CONTEMPO




IMPORTANT! KEEP FOR FUTURE REFERENCE

PARTS

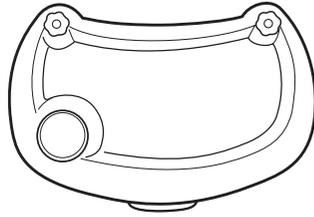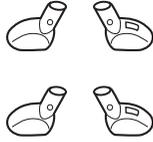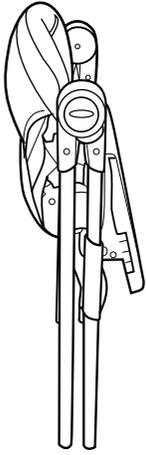


ACCESSORIES (certain models only)

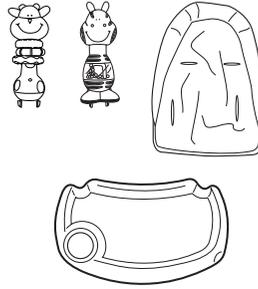


Attaching Front Casters (Certain models only)

1

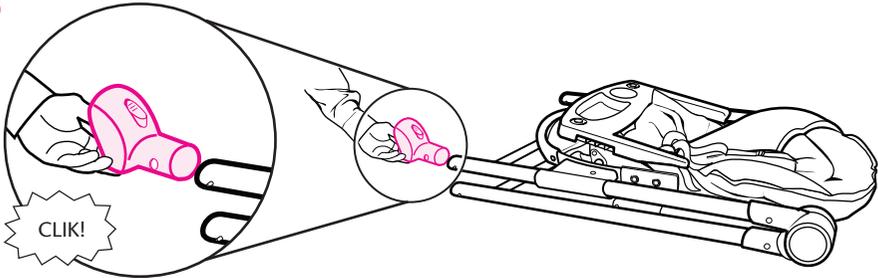


Attaching Rear Feet (Certain models only)

2

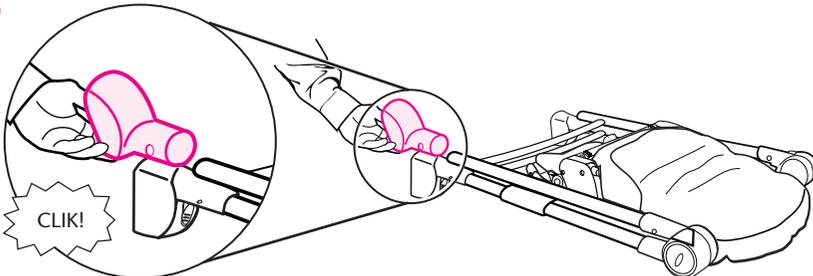


Opening Highchair


3

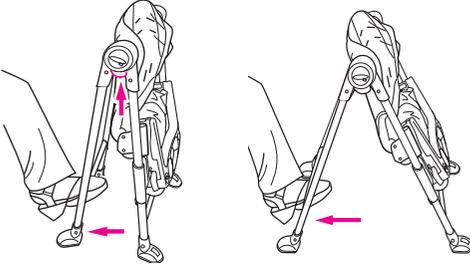



6

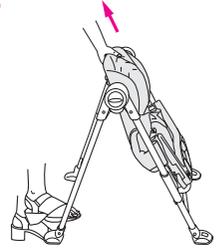

4

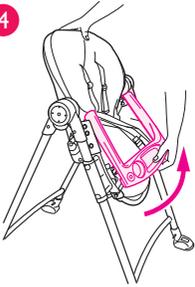


5

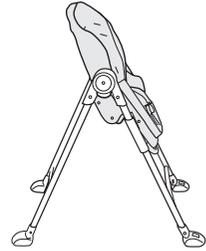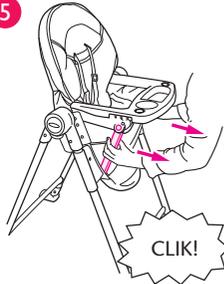


Reclining Seat

7

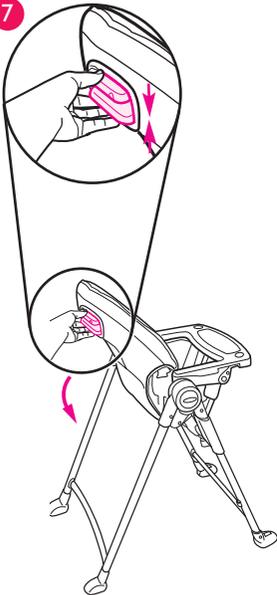


Adjusting Height







8

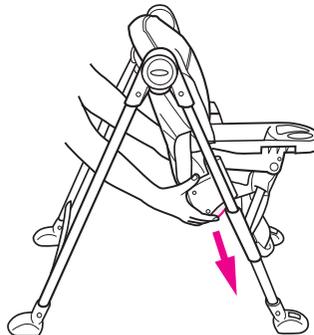





9

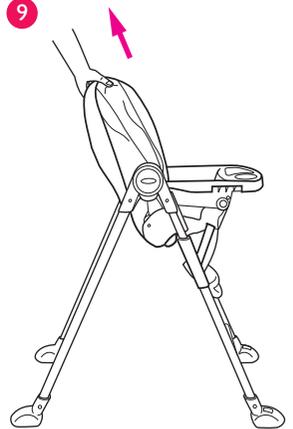


To Secure your Child

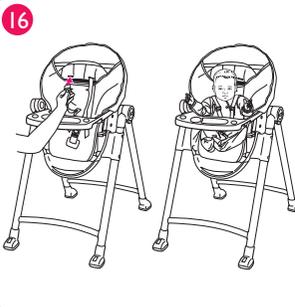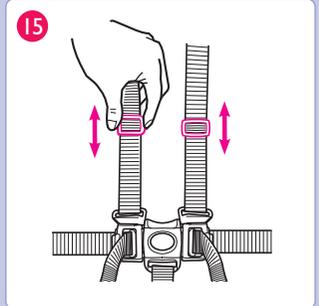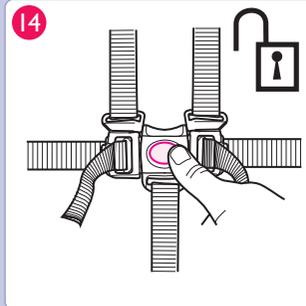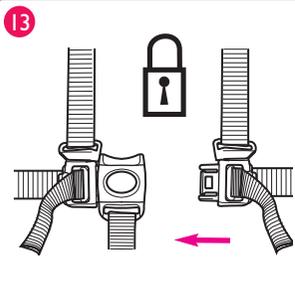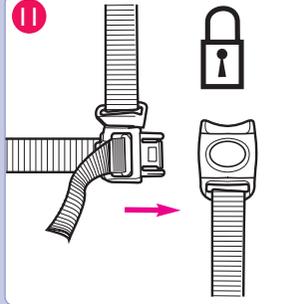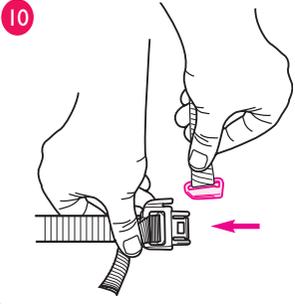

3 Point Buckle

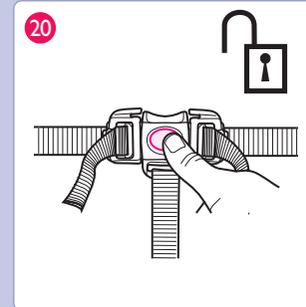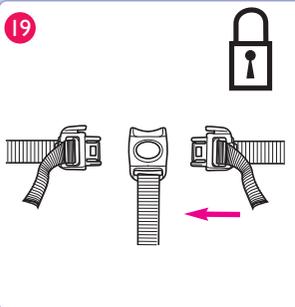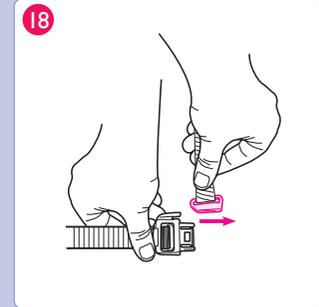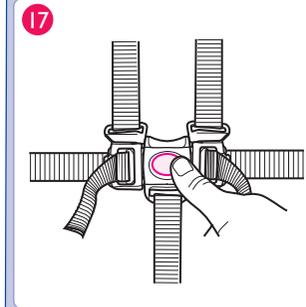



Attaching Tray

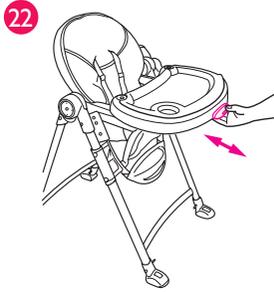





Head Support (on certain models)












Tray Insert

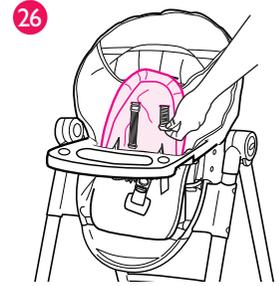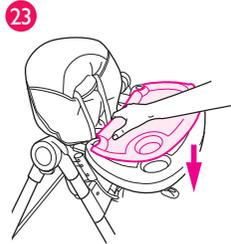

Storage

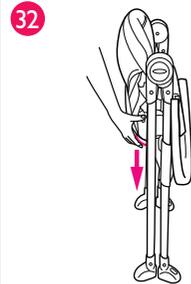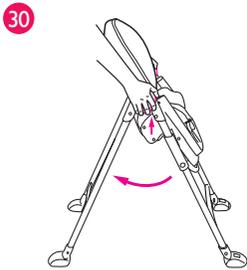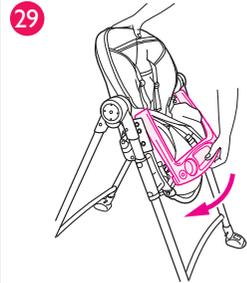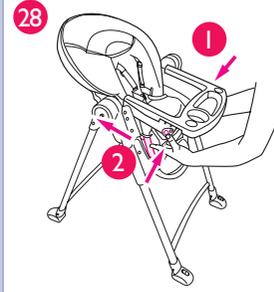


Removing Seat Pad

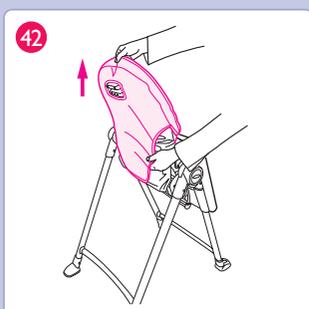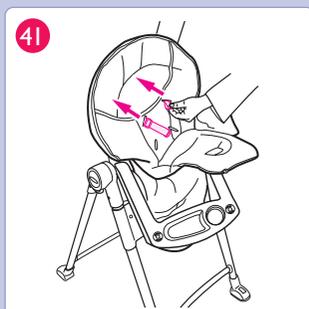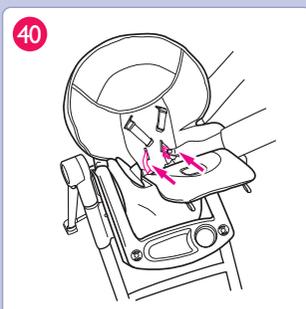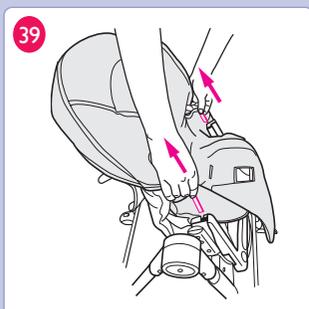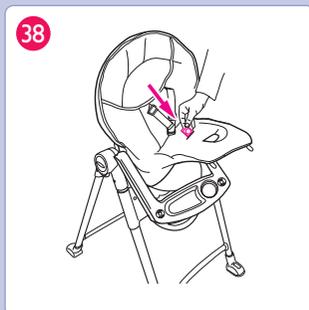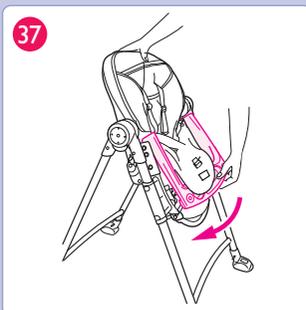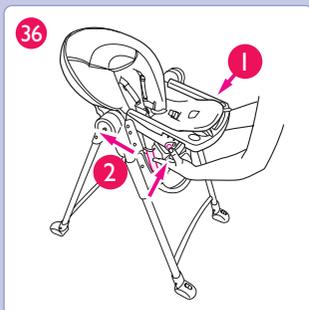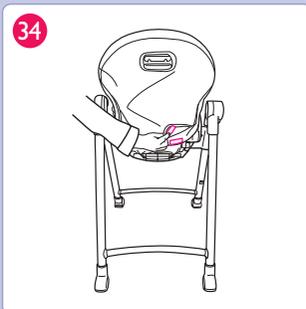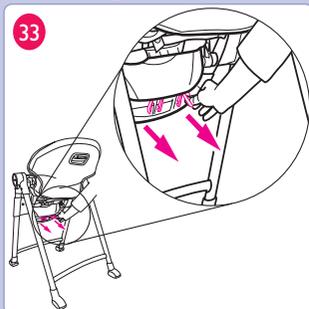


Casters (Certain models only)


43

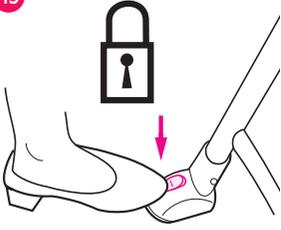

44

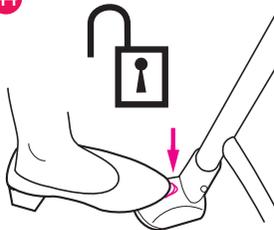

Mix 'N Move Toys (certain models only)

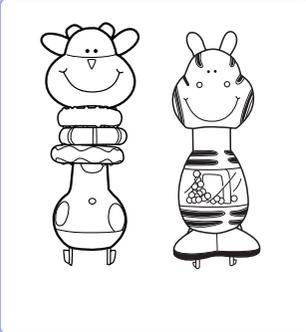

45



46



47



48



IMPORTANT! KEEP FOR FUTURE REFERENCE

PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.

EN 14988-1:2006

WARNING: DO NOT leave your child unattended. Always keep your child in view.

WARNING: DO NOT use highchair unless all components are correctly fitted and adjusted.

WARNING: Always make sure that the harness is correctly fitted and adjusted.

DO NOT use the highchair until the child can sit up unaided.

DO NOT move highchair with child inside.

Use only on a level stable surface.

STORE HIGHCHAIR away from children when not in use.

ENSURE THAT all additional hazards such as electrical flex are kept out of reach of the child in the highchair. If the highchair is used by someone unfamiliar with it, e.g. grandparents, always show them how it works.

PREVENT SERIOUS INJURY OR DEATH FROM FALLS OR SLIDING OUT. Always use seat belt. Secure your child at all times with the restraint system provided, in either the reclining or upright position. The tray is not designed to hold your child in the highchair.

Regularly check the locks and fittings for security.

DO NOT FORCE TRAY against child. Use only the four adjustment positions. Be sure both adjustment fingers are engaged in armrest slots.

STRANGULATION HAZARD:

Do not place highchair in any location where there are cords, such as window blind cords, drapes, phone cords, etc.

THIS HIGHCHAIR IS DESIGNED TO BE used by a child up to 3 years of age. Maximum weight 40 pounds (18.1 kg).

FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.

If you experience any difficulties, please contact the Customer Service Department.

DO NOT TO USE THE HIGHCHAIR if any part is broken, torn or missing.

WARNING: A child's safety is your responsibility. Child should be harnessed at all times and the highchair must be fully open and locked before placing child inside.

For extra safety, D-rings are provided for a separate safety harness approved to BS6684 and EN13210.

WARNING: Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the high chair.

CARE AND MAINTENANCE

FROM TIME TO TIME CHECK YOUR HIGHCHAIR for worn parts, torn vinyl or stitching. Replace or repair the parts as needed. Use only Graco replacement parts.

TO CLEAN HIGHCHAIR FRAME, use only household soap and warm water. **NO BLEACH** or detergent.

TO CLEAN REMOVABLE SEAT COVER, DO NOT machine wash or dry. Use only household soap and warm water. **NO BLEACH** or detergent.

Attaching Casters (Certain models only)

- 1 Attach front casters with locks onto front legs.
- 2 Snap rear feet onto rear legs.

Opening Highchair

See images **3** – **6**

Reclining Seat

- 7 3 recline positions

Adjusting Height

See images **8** – **9**

To Secure Your Child

See images **10** – **20**

- 15 Use slide adjuster at shoulder and waist for further adjustment. Repeat on other side.
- 16 When changing harness strap slots, **MAKE SURE** harness straps are going through same slots in seat pad and seat back.

The harness straps must go into the slot that is even with or slightly above the shoulders. Avoid twisting straps.

Attaching Tray

- 21 Slide tray onto snack tray.
- 22 Squeeze adjustment button on front of tray to adjust tray to fit child.

Tray Insert

- 23 Snap tray insert onto tray.
- 24 To remove, lift tray up from corner.

Head Support

See images **25** – **26**

Storage

- 27 Remove tray before folding highchair.
- 28 Push red buttons on each side of snack tray to release, as you push side bars back.
- 31 Place tray on highchair for storage, as shown.
- 32 Optional: for maximum storage, lower highchair.

Removing Seat Pad

- 33 Unhook elastic straps on seat pad from the back of footrest.
- 34 Unfasten hook and loop tape on back of seat pad.
- 35 Pull bottom of seat pad out through opening behind snack tray.
- 36 Push red buttons on each side of snack tray to release, as you push side bars back.
- 37 Push red buttons on each side of snack tray to release, as you push side bars back.
- 38 Push crotch strap through bottom slot.
- 39 Pull sides of seat pad fabric out of the channels located in the back of the snack tray.
- 40 Push waist straps through slots in seat pad.
- 41 Pull harness straps through slots in seat pad.
- 42 Pull seat pad off backrest.

Casters (Certain models only)

- 43 To lock casters.
- 44 To unlock casters.

Mix 'N Move Toys (Certain models only)

- 45 To remove plugs.
- 46 – 47 To attach toy
- 48 To reattach plugs when not using Mix 'N Move Toys.

EN IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.



Graco Children's Products UK & Ireland
Halifax Avenue
Fradley Park
Lichfield WS 13 8SS
United Kingdom

Graco Continental Europe
Newell Rubbermaid Luxembourg SARL
1 rue Edmond Reuter
L-5326 CONTERN
Luxembourg

www.graco.eu