

valco
baby

VIVA BASSINET

SUITABLE FOR TRIMODE, TRIMODE EX,
MATRIX AND RUNABOUT (2006+) MODELS

PRODUCT REFERENCE GUIDE

Thank you for purchasing a quality Valco Baby product. Please read and follow the instructions outlined in this guide carefully. Familiarise yourself with the construction and safety features; be sure that you understand all the warnings and safety guidelines before use.

Important: Please read the following instructions carefully before assembling this product. Retain this guide in a safe place for future reference.



Due to our policy of continuous product development, this product is constantly evolving. It is possible that some features or procedures outlined here have changed since this document was written. If you are unsure of any procedure shown here, please contact us via the web at info@valco.com.au to obtain the most up to date information before use. Include the batch number, which can be found on a sticker on the frame.

All pictures and diagrams herein are provided for illustration purposes only. Actual product, colour or fabric may vary. Valco Baby reserves the right to modify or alter any specification or colour without notice or obligation to modify any product previously purchased

FURTHER INFORMATION

In Australia/New Zealand

www.valco.com.au

In North America only

www.valcobaby.com
1800 610 7850



© Copyright VE 2009

BASSINET ASSEMBLY

Remove the bassinet from the cart and dispose of all packaging immediately and thoughtfully.

FIGURE A - CONTENTS

1. Remove the seat fabrics and bumper bar from your stroller.
2. Inside your bassinet package you will find a set of 2 plastic locking pieces.
3. With the release buttons facing inward (3), insert each locking piece in turn into the plastic housing on either side of the stroller frame.


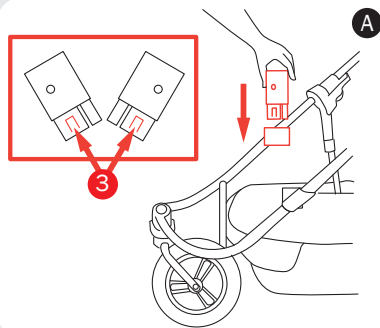


FIGURE B - INSTALLING YOUR BASSINET

4. Standing at the side of the chassis and holding the bassinet at both sides by the plastic hand grips; tilt the bassinet slightly toward you.
5. Gently slide the bassinet housing just over the plastic locking piece closest to you in the chassis.
6. "Line up" the other side and repeat step
7. Press down gently on the bassinet and it will slide down and click into place.

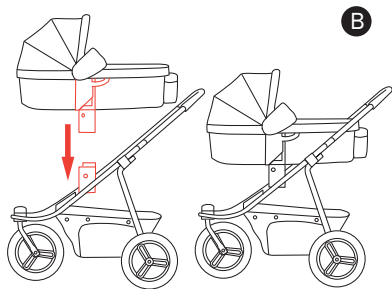

IMPORTANT WARNING: ALWAYS TEST THAT ALL LATCHES ARE SECURELY ENGAGED BEFORE USE.

FIGURE C - REMOVING YOUR BASSINET

8. To remove; holding the bassinet by the plastic grips on either side, simultaneously press the two triggers (8) located in the grip and lift the bassinet up and out of the housing.


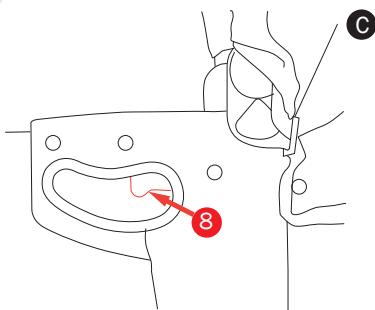


FIGURE D - CARRYING YOUR BASSINET

9. Your VIVA bassinet has been designed to be easily removed and carried. Make sure that the hood is fully extended and locked into position by pulling it forward as far as it will go.
10. To carry the bassinet, grab the padded hood bar at the top of the hood and away you go! When the hood is locked in the OPEN position it has been designed so that it will not collapse when carried.

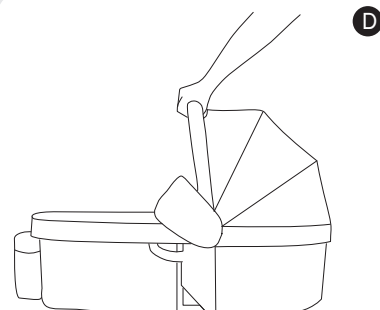

WARNING ! : ALWAYS ENSURE THAT THE HOOD IS SECURELY LOCKED IN THE FULLY OPEN POSITION BEFORE CARRYING THE BASSINET

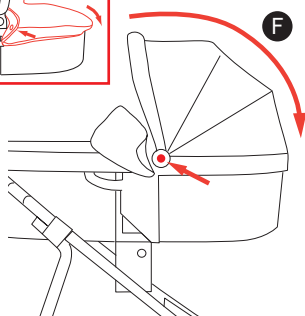
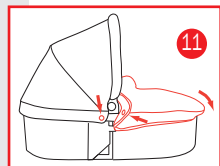
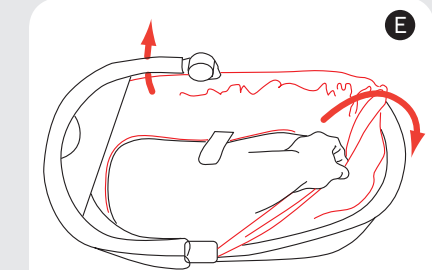


FIGURE E - INNER LINING AND APRON

Your Viva bassinet has a removable (and washable) inner lining.

11. To Remove; carefully lift off the lining, taking special care when undoing the press studs.
12. To Replace; following the contours of the bassinet rim, line the studs in the lining with the corresponding studs in the bassinet body. Fold the lining over the rim and fasten the studs carefully.
13. The apron is easily attached by wrapping it over the bassinet sides and securing in position with the press studs found on the sides of the hood.

FIGURE F - HOOD

14. To fold the hood down, press down on the hood lock (one side only) to release the hood, and simultaneously push back on the carry bar.

FIGURE G - 'SIT UP' SEAT SYSTEM



Your Viva bassinet has been equipped with a new "sit up" seat function. This is for use when your child is able to sit up unassisted and increases the practicable age that your child can use the bassinet.

15. Lift the sit up backrest to about 90° degrees to the base.
16. Swivel the locking arm outward until it rests firmly in the channels, up against the locking stoppers.

17. To disengage, reverse this process.

18. Attach your additional harness (optional extra) to the "D" rings installed in the base of the bassinet at either side.

WARNING: YOUR CHILD MUST ALWAYS BE HARNESSSED WHEN IN THE SIT UP POSITION.

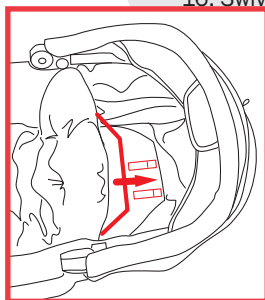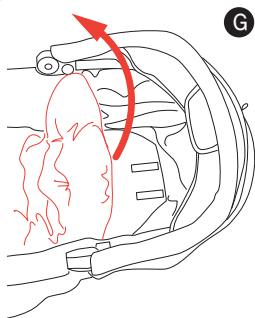

SAFETY HARNESS

The Valco Baby Safety Harness is recommended to enable you to harness your child when in the sit up position. The Valco Baby Safety Harness is available from your retailer.

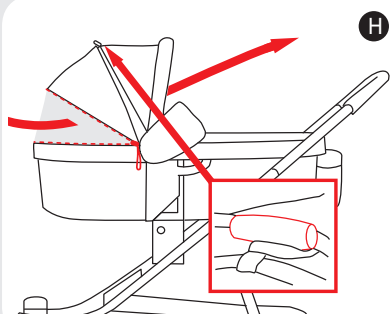


FIGURE H - EXTENDED AIRGO SYSTEM

19. To increase the airflow through your bassinet, simply unzip the lower panel at the rear of your hood, lift the cover and secure it with the toggle and elastic loop at the top of the panel join.

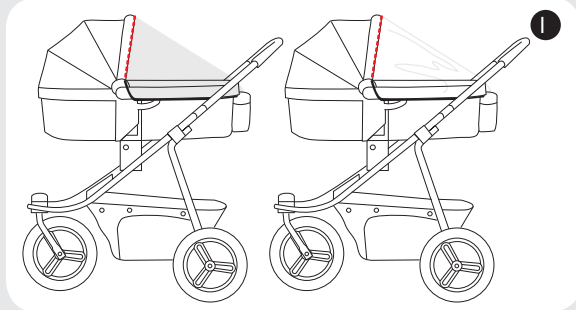


FIGURE I - UV INSECT MESH AND RAIN COVER

18. Your bassinet comes with a Zip-In UV insect mesh and a rain cover. To attach either, simply align the zipper foot of the cover with the corresponding zip fixture on the hood and carefully zip on the cover. Stretch the cover over the foot of the bassinet to attach.

BASSINET WARNINGS

- ALWAYS HOLD THE BASSINET IN SUCH A WAY THAT YOU KEEP THE BASSINET BALANCED AND THE BASSINET WITH THE CHILD REMAINS IN THE HORIZONTAL POSITION.
- THE BASSINET IS ONLY SUITABLE FOR A CHILD THAT CANNOT SIT UP ON ITS OWN OR ROLL ONTO ITS SIDE AND CANNOT SUPPORT ITSELF ON ITS HANDS AND KNEES.
- ONLY PLACE THE BASSINET DOWN ON A FIRM, HORIZONTAL AND DRY SURFACE.
- DO NOT ALLOW OTHER CHILDREN TO PLAY NEAR THE BASSINET UNATTENDED
- DO NOT USE THE BASSINET OR THE STROLLER IF ANY PARTS ARE BROKEN, TORN OR MISSING
- THE MAXIMUM WEIGHT OF A CHILD FOR WHICH THIS BASSINET WAS INTENDED IS 9KGS.

AVOID SUFFOCATION HAZARDS:

- UNLIKE CRIBS THAT HAVE RIGID SIDES, THE BASSINET MATTRESS IS SPECIALLY DESIGNED TO PREVENT SUFFOCATION. THE MATTRESS IS DESIGNED TO BE A SNUG FIT AND SHOULD NOT EXCEED 30MM IN THICKNESS. USING A THICKER OR DIFFERENT SIZED MATTRESS MAY ALLOW A CHILD'S HEAD TO GET BETWEEN THE MATTRESS AND THE SIDE OF THE BASSINET CAUSING SUFFOCATION. TO HELP PREVENT SUFFOCATION FROM ENTRAPMENT, USE ONLY THE MATTRESS PROVIDED.
- NEVER USE ADDITIONAL MATTRESS OR PADDING. USE ONLY THE FITTED SHEET PROVIDED.

STROLLER WARNINGS

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE PRAM/STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS PRAM/STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE PRAM/STROLLER. OTHERWISE THEY MAY BE INJURED.

Remember, your child's safety is your responsibility...

- NEVER USE ON STAIRS OR ESCALATORS.
- ALWAYS USE THE TETHER STRAP WHEN THE STROLLER IS IN USE.
- THE CORRECT USE AND MAINTENANCE OF THIS VEHICLE ARE ESSENTIAL.
- BE SURE THAT ALL CLAMPS AND BUCKLES ARE SECURELY FIXED AND IN PLACE BEFORE USE
- WHEN IN THE STROLLER, YOUR CHILD MUST ALWAYS WEAR THE SAFETY HARNESS, CORRECTLY FITTED AND ADJUSTED, AT ALL TIMES.
- THE MAXIMUM WEIGHT OF THE CHILD FOR WHICH THIS STROLLER WAS INTENDED IS 22 KGS.
- CAN BE USED FROM A NEWBORN BABY ONWARDS. A COCOON, SPECIALLY DESIGNED TO BE USED WITH A STROLLER, IS RECOMMENDED WHEN ANY FULLY RECLINING STROLLER IS USED WITH A NEWBORN.
- NEVER RUN WITH A NEWBORN BABY IN ANY PRAM OR STROLLER UNTIL THE CHILD CAN SIT UP UNASSISTED (APPROXIMATELY 6 MONTHS).
- CHECK ALL PARTS BEFORE USE FOR BREAKAGE OR FATIGUE. DISCONTINUE USE IMMEDIATELY IF ANY PART IS FOUND TO BE DAMAGED OR BROKEN.
- MAXIMUM LOAD OF BASKETS: 3.5KGS.
- DO NOT CARRY ADDITIONAL CHILDREN. THIS STROLLER IS MANUFACTURED FOR THE USE WITH ONE CHILD ONLY
- ALWAYS BE AWARE OF THE RISKS PROVIDED BY FIRE AND OTHER SIGNIFICANT SOURCES OF HEAT SUCH AS RADIATORS, ETC. WHICH MAY BE IN THE IMMEDIATE VICINITY OF YOUR STROLLER.
- IT MAY BE UNSAFE TO USE ANY ACCESSORIES OTHER THAN VALCO BABY APPROVED ONES.
- THIS PRODUCT IS INTENDED FOR DOMESTIC USE ONLY. IT IS NOT INTENDED FOR COMMERCIAL USE.

Should the chassis become wet, dry off promptly before storing. If this pram is used near the ocean or salted roads, spray the chassis and seat frame with water and dry. We recommend a rust inhibiting product should be used to prevent rust and fatigue on metal parts.

We recommend that you wipe down axles and lubricate the wheels every 3 months. Sand and dirt can grind down axles, if you live near the beach or in a dusty environment you must wipe down the axles and wheels then lubricate them monthly.

AXLES ARE BEST LUBRICATED WITH GREASE OR PETROLEUM JELLY. MOVING PARTS ARE BEST LUBRICATED WITH SILICONE BASED PRODUCTS. DO NOT USE OIL BASED PRODUCTS

valco
baby

In Australia/New Zealand

www.valco.com.au

In North America only

www.valcobaby.com
1 800 610 7850